


**Einbau VW 2DIN-Schacht**





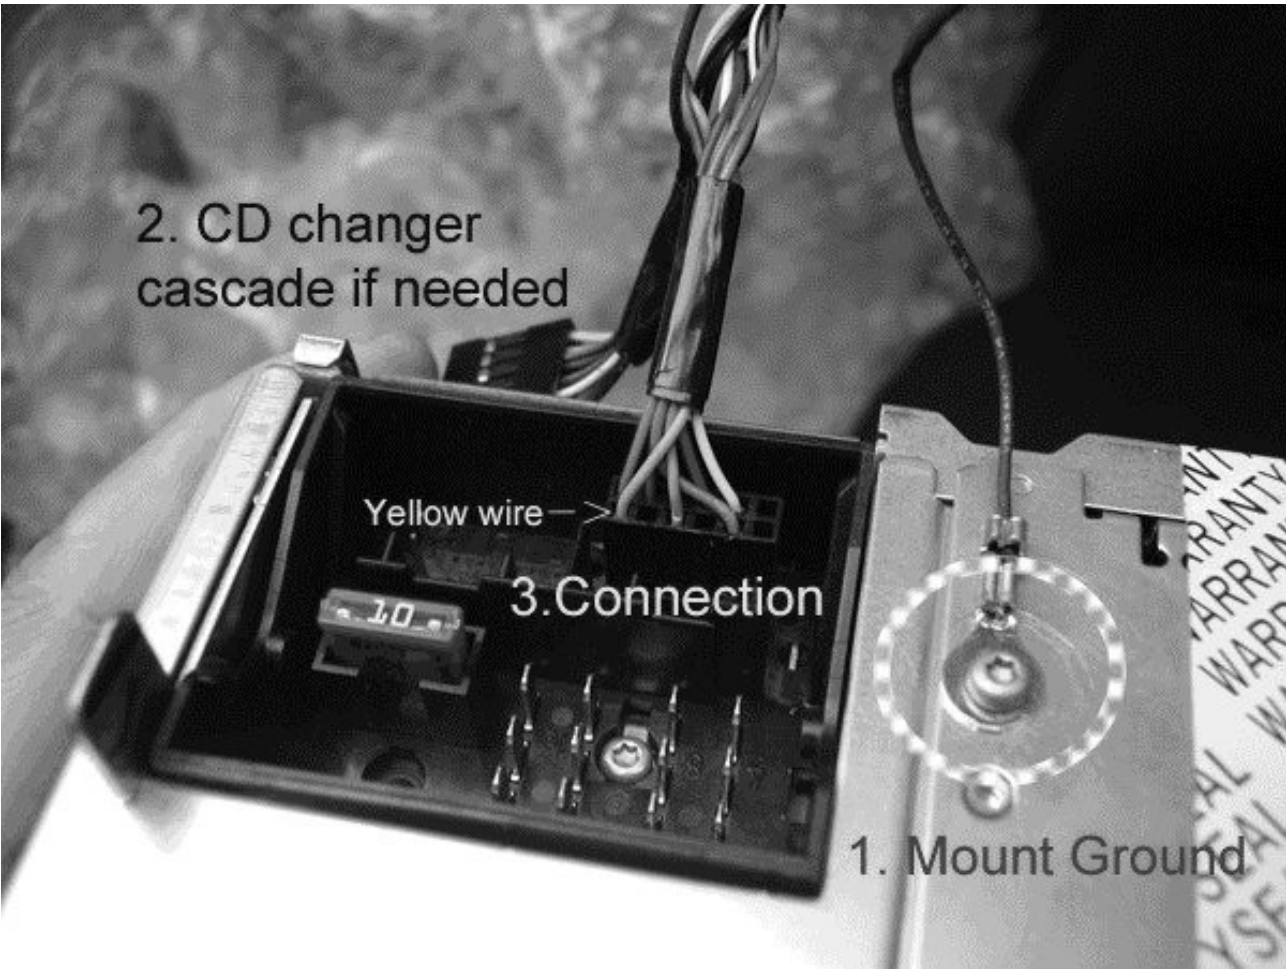

2. CD changer cascade if needed

Yellow wire

3. Connection

1. Mount Ground